


# Montage handleiding Carport Miro aanbouw


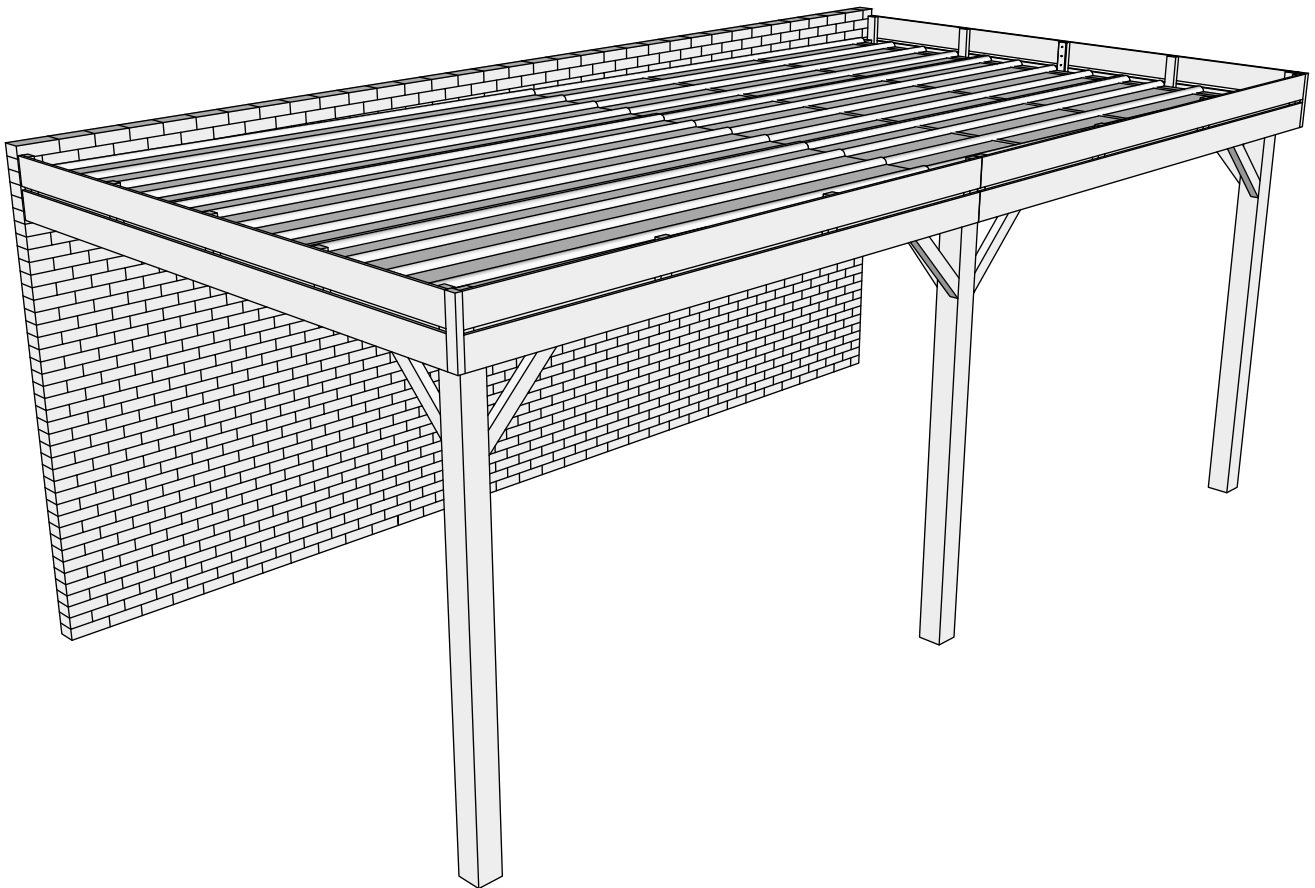


# Stuklijst

pos.	omschrijving / description	aantal / nombre	dikte / épaisseur	breedte / largeur	lengte / longueur
A006	steunpaal	1	120 mm	120 mm	2265 mm
A008	steunpaal	1	120 mm	120 mm	2265 mm
A010	steunpaal	1	120 mm	120 mm	2265 mm
B002	lengtebalk	4	45 mm	145 mm	2982 mm
C002	dakbalk	7	45 mm	145 mm	2950 mm
D001	hoekversteving	7	45 mm	68 mm	504 mm
E001	steunblok dakrand	20	32 mm	57 mm	298 mm
F003	dakrandplank	4	15 mm	140 mm	3020 mm
F004	dakrandplank	4	15 mm	140 mm	2997 mm
X002	metalen dakplaat	6	31 mm	1068 mm	3000 mm
Y002	metalen dakrandbeugel	1	50 mm	165 mm	298 mm
Y003	balkdrager 45 mm	10	125 mm	77 mm	96 mm
Y005	balkdrager 50 mm rechts	1	77 mm	96 mm	65 mm
Z002	schroef	343	5x35 mm		
Z006	schroef	38	5x80 mm		
Z007	schroef	28	6x100 mm		
Z020	schroef	100	6,5x75 mm		
Z021	afdekkap	100			
Z030	Raamplug met rondel	10	10x112 mm		



1.

┆ Z002 x 84  
┆ Z030 x 10

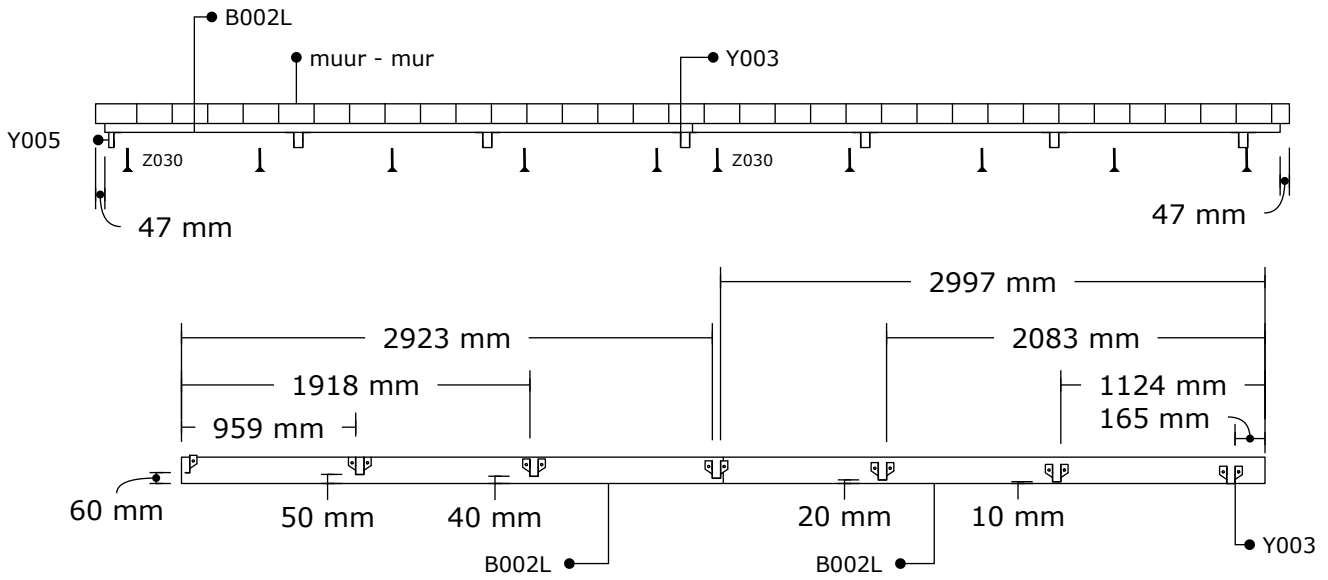
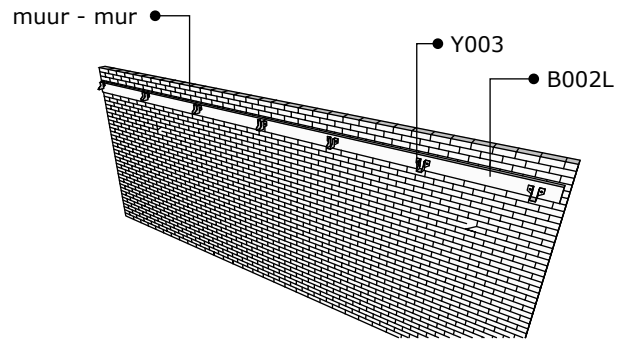


2.



┆ Z002 x 48

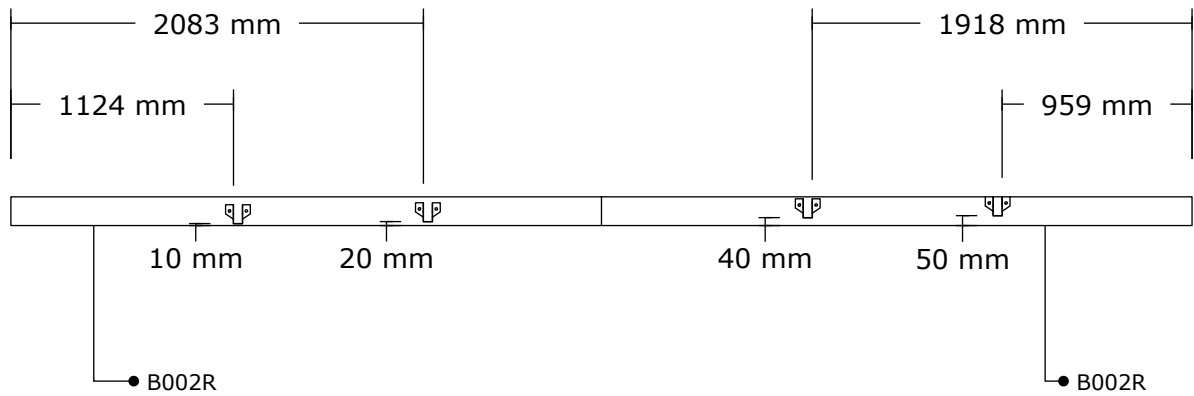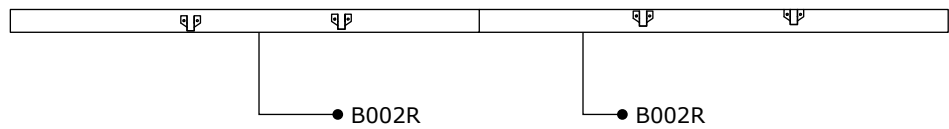

3.

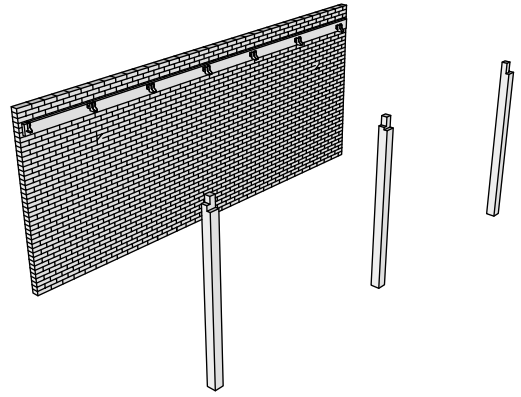
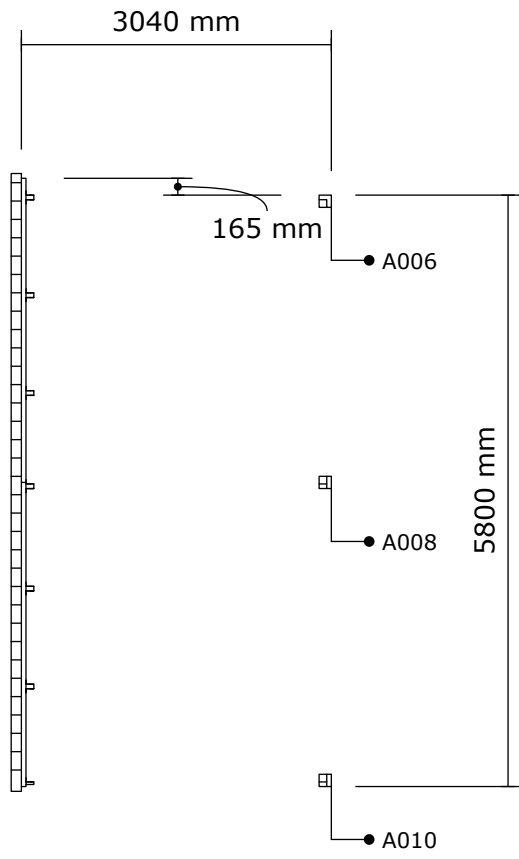


4.

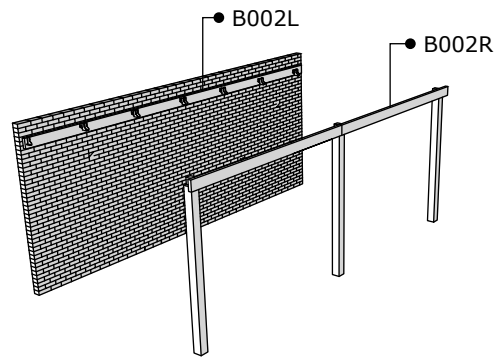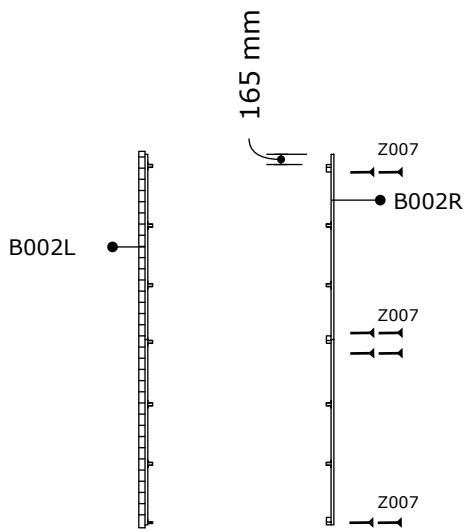


┌ Z007 x 8

5.

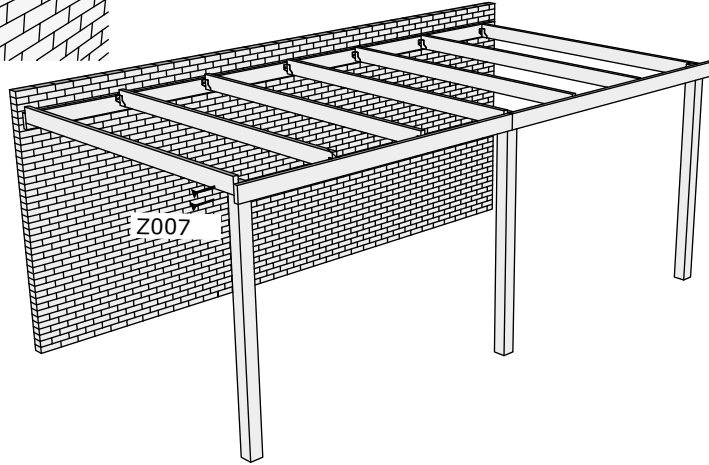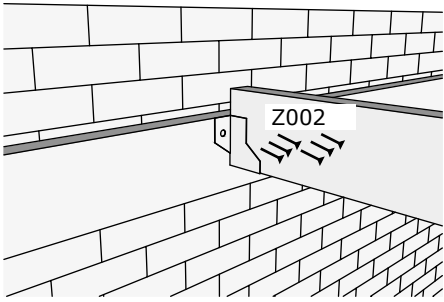



┆ Z002 x132  
┆ Z007 x 6

6.

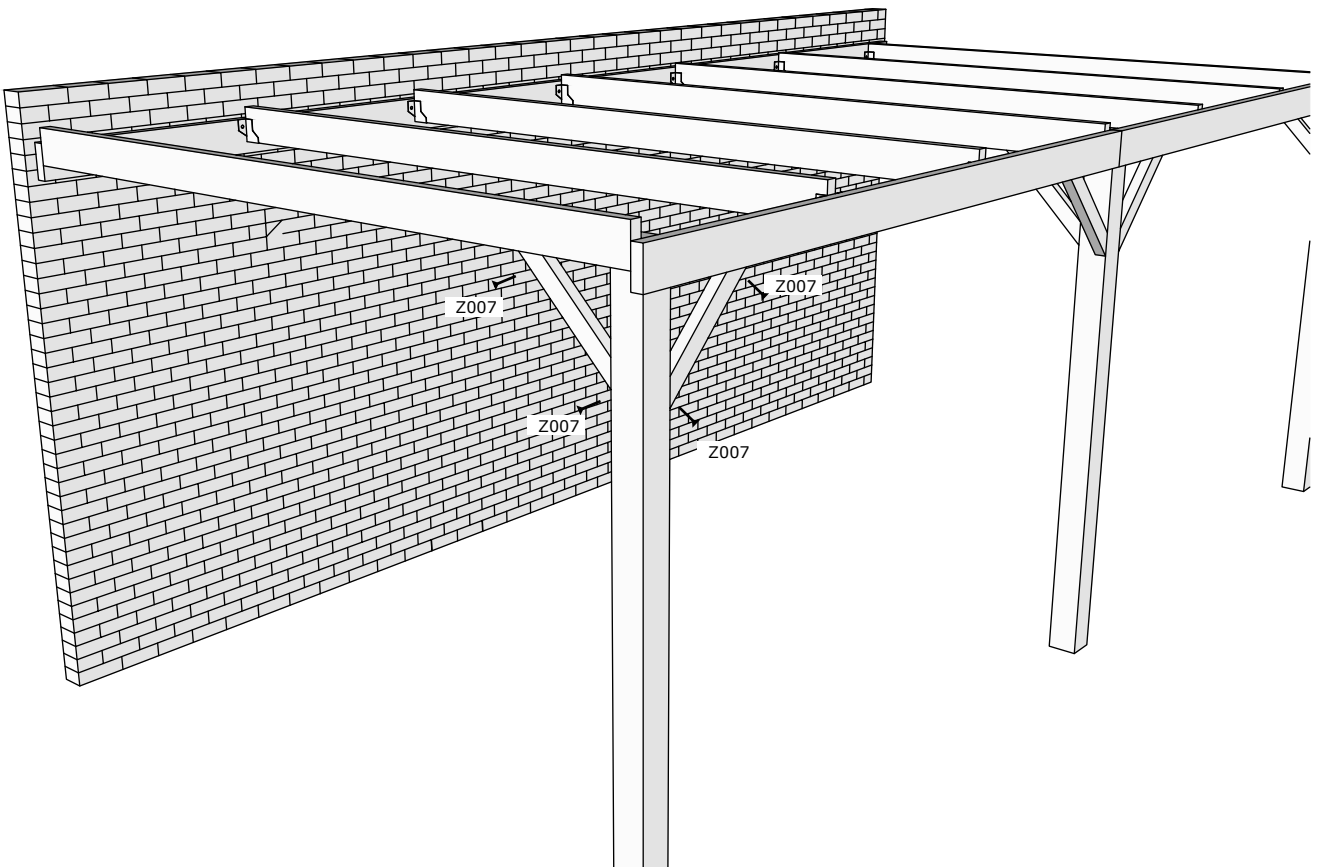


┆ Z007 x 14

7.

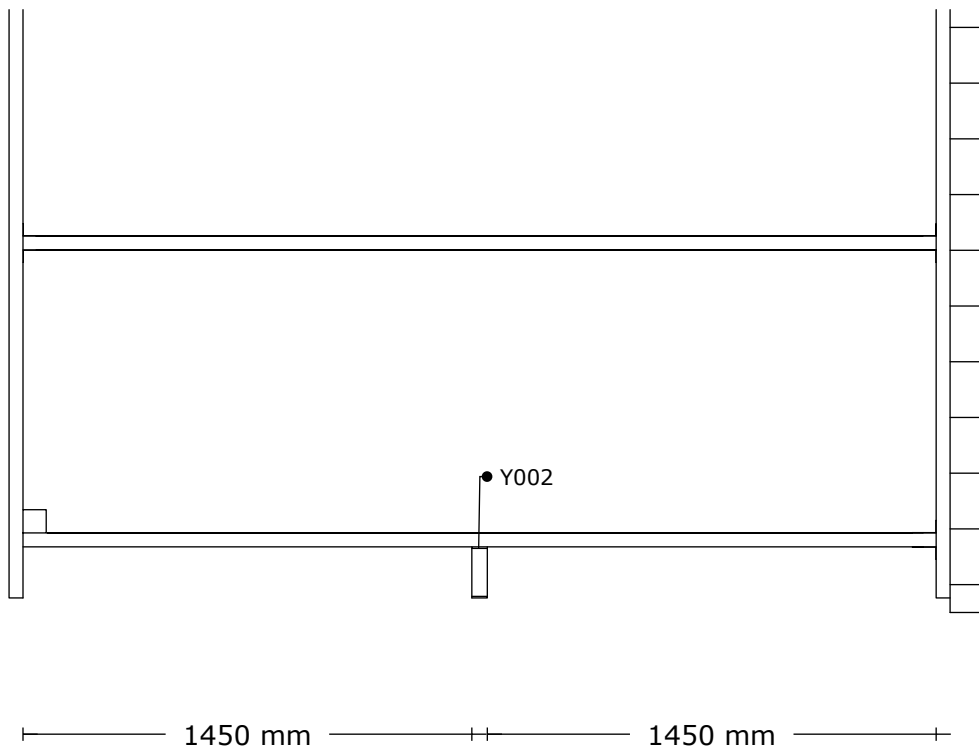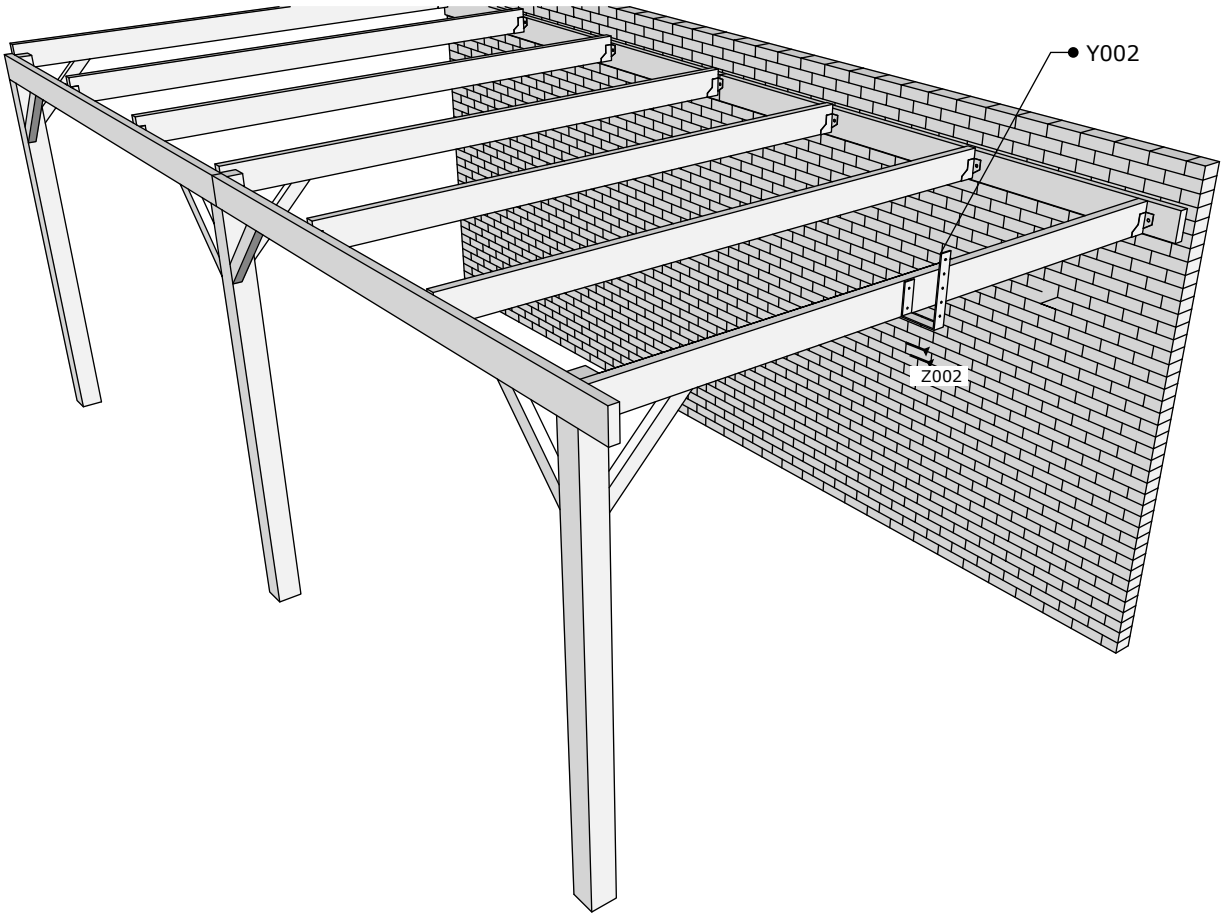


┌ Z002 x 2

8.

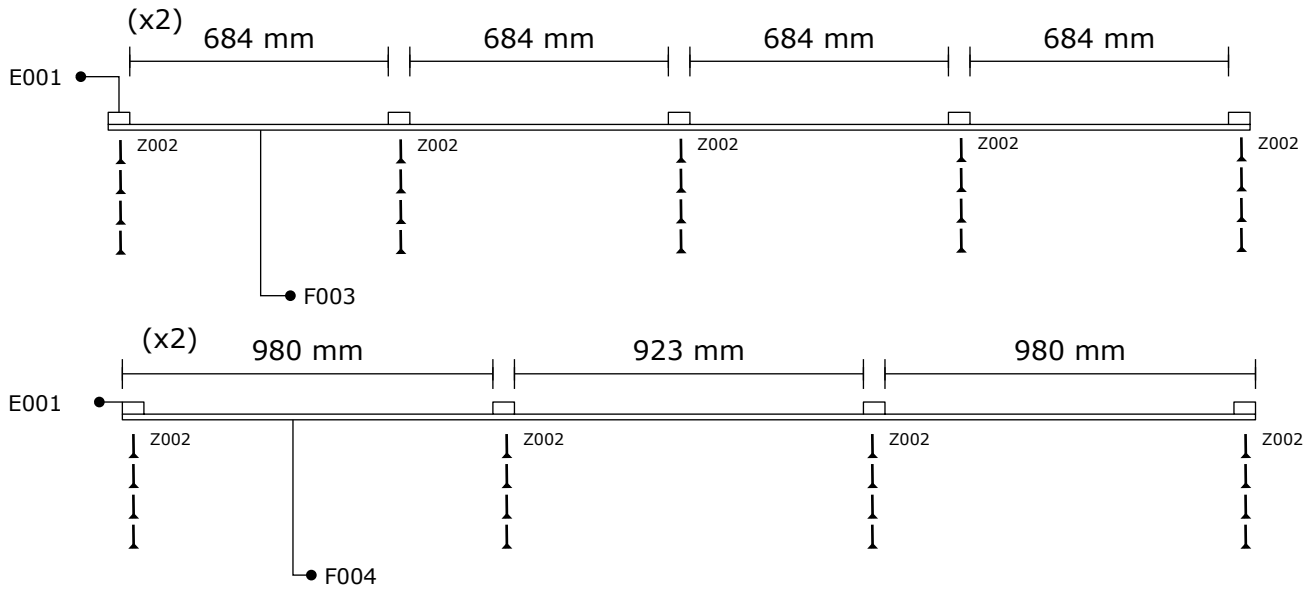


└ Z002 x 72

9. perspectif

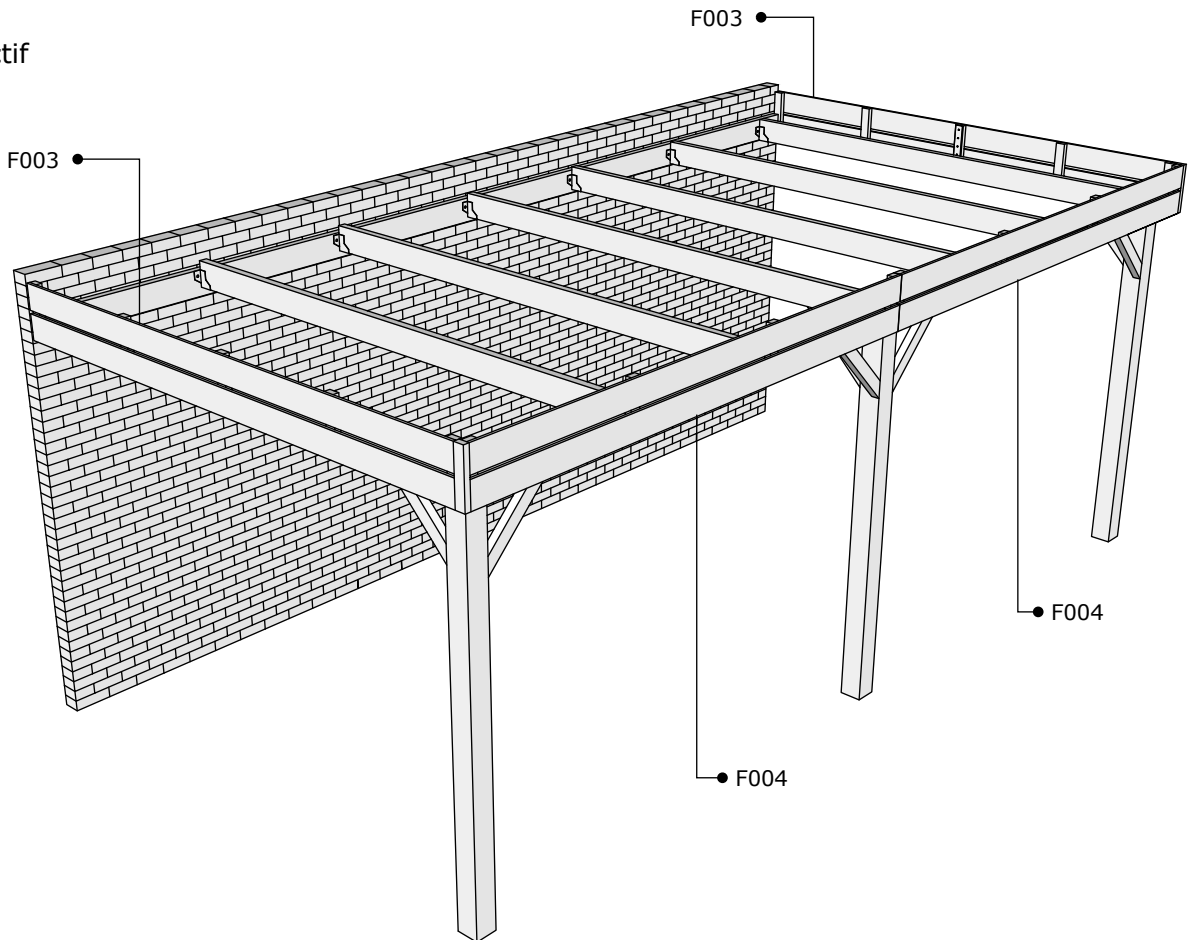


9. detail

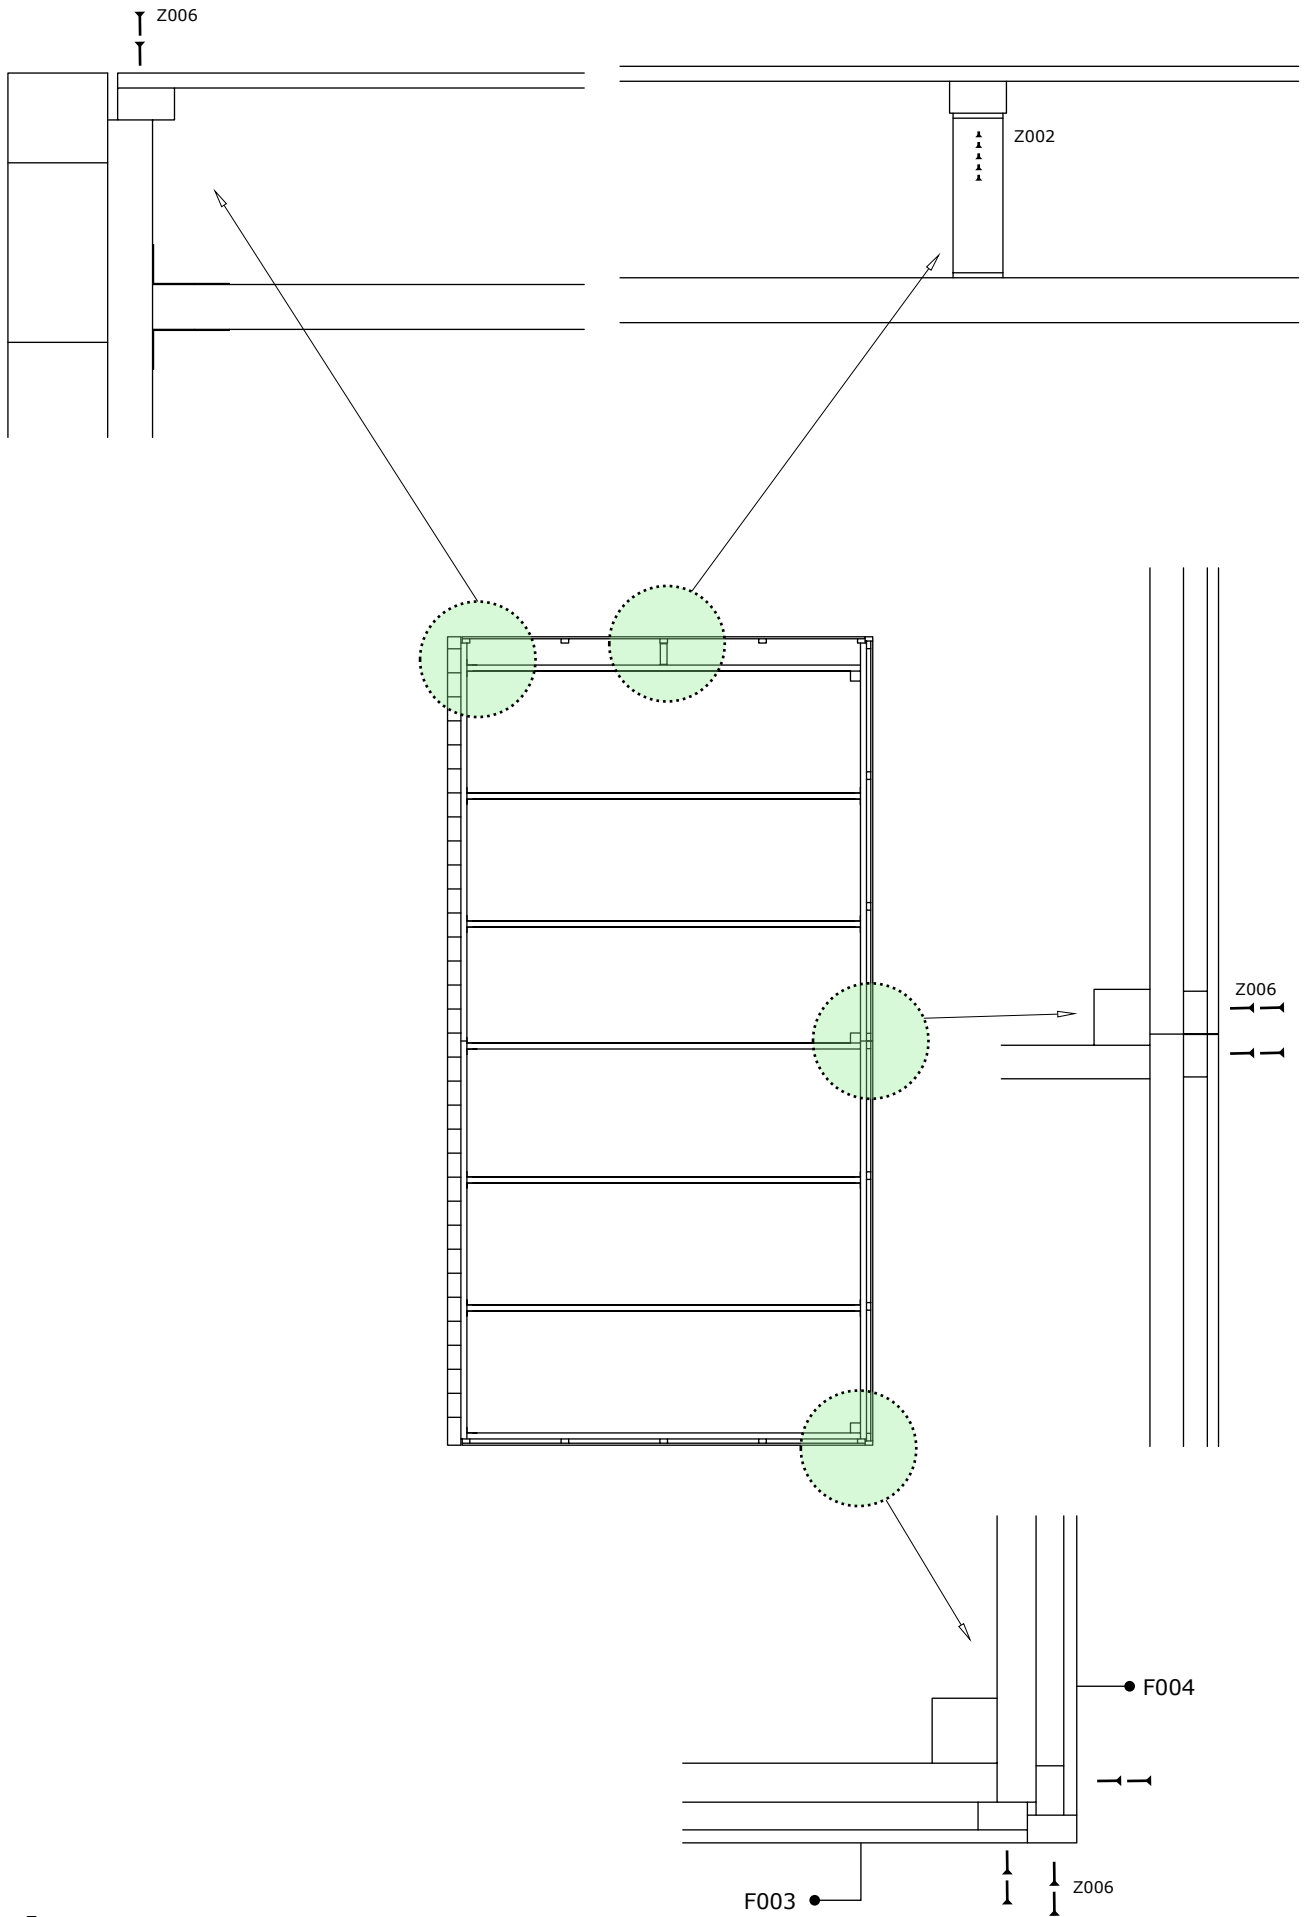




10.

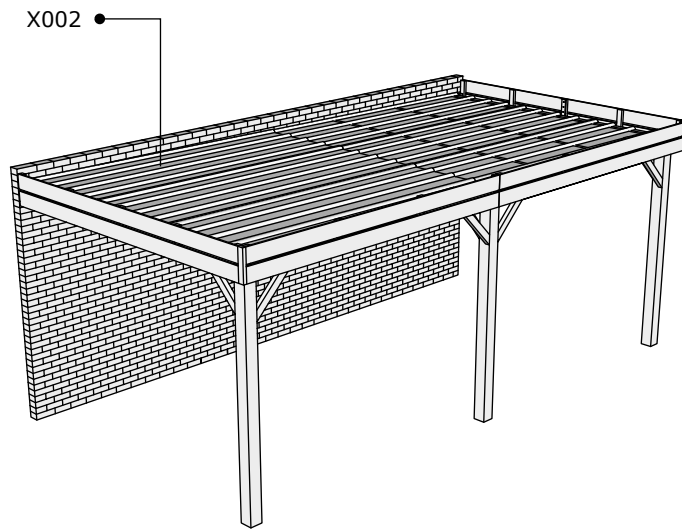


Z020  
Z021


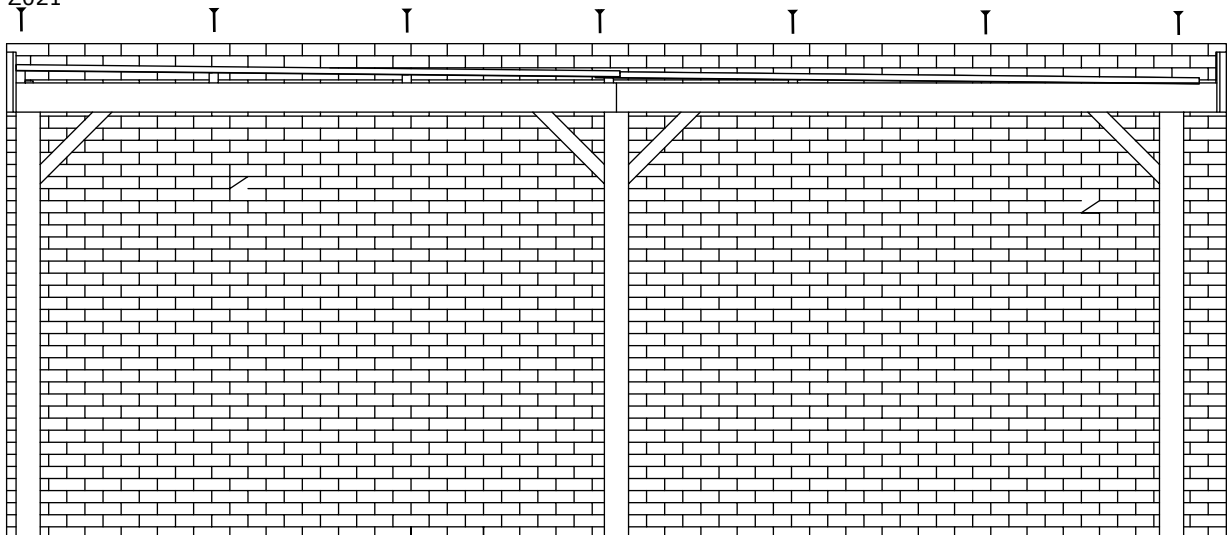


┆ Z020 x 91  
┆ Z021 x 91


# details onderdelen

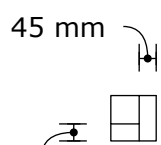

• A010

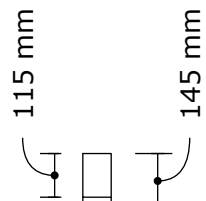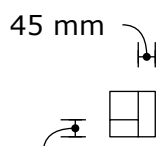

• A008

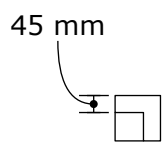

• A006

